

MAINTENANCE AND SAFETY RULES

hushwall HSM-SM-002

1 ASSEMBLY

For information on the correct method of assembly and the components number, please refer to the assembly instructions.

Assembly and disassembly should be carried out by a trained assembly team according to the enclosed assembly instructions and the tools intended for this purpose.

2 UPHOLSTERED PANELS

Before cleaning, the upholstered item should be cleaned with an electrostatic dusting broom or hoovered with a soft brush.

Do not use solvents, chemical thinners or pastes containing abrasive substances to remove dirt and stains on fabrics.

3 ROLLER SHUTTER

Avoid storing large objects in the cabinet. Anything that collides with the roller shutter path can cause its deformation or a complete damage.


4 TV BRACKET INSTALLATION

The maximum weight of the TV with bracket is 15 kg.

To connect the screen, we recommend that you remove the upholstered panel as described in the installation instructions.

5 POWER SUPPLY

An extension lead or power bar is required to connect a wall-mounted television. A grommet in the bottom panel allows the screen power cable to be connected to the floor box from the bottom of the wall.

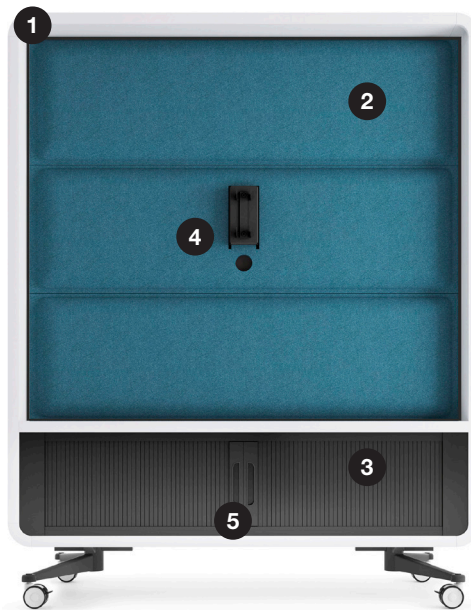

6 SURFACE

It is recommended to move the furniture on hard or carpeted surfaces.

Uneven surfaces on which the wall unit is moved may damage the connection between the rolling base and the furniture body.

Defects and uneven surfaces on which the wall unit is moved can cause damage to the connection between the rolling base and the body.

7 USE

Please remember to use our products in covered and dry areas.

The following factors can also have a negative effect:

- exposure to water,
- prolonged exposure to sunlight,
- humidity above 70%.

Maximum load on one metal shelf – 8 kg.

Do not use if the product when it is damaged. Please read the instruction manual and keep it in a safe place.

8 ROLLING BASE WITH CASTORS

To stabilise the wall where it is to be used, use the brakes fitted to the castors.

The use of two brakes ensures the minimum required locking of the wall.

To change the position of the wall, remember to release the brakes. If you leave the brakes locked when you try to move the wall, you risk damaging the castors completely or pulling out and damaging the screen power cable.

9 DRY-WIPE BOARD

Items with sharp edges or rough surfaces can scratch the paint on the dry-wipe board. It is recommended to avoid contact of the board surface with corrosive or lacquer-dissolving substances or substances containing acetone and ethyl alcohol.




hushoffice

hushoffice.com

MAINTENANCE AND SAFETY RULES

hushwall HSM-SM-002

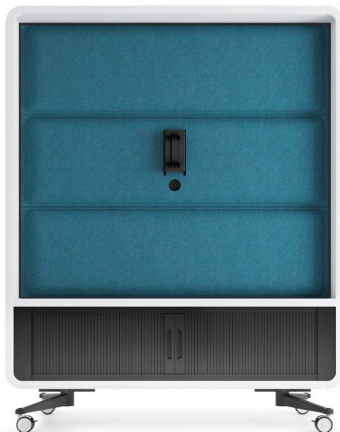

CASE

Once a week, clean the surface from top to bottom with a damp microfibre cloth that does not leave fibres and prevent streaks. If you accidentally spill cleaning product on furniture, wipe it up immediately before it dries. Do not use preparations containing solvents or abrasives, such as cleaning powders, pastes or milks, which may scratch the surface. Do not use rough sponges.

Do a test on a barely visible surface before application.



UPHOLSTERED PANEL

Once every six months, vacuum the surface from top to bottom.

Other cleaning methods:

- upholstery/cloth cleaning roller,
- vacuuming with a clean, soft brush.

The felt should not be soaked, but only gently cleaned with a damp microfibre cloth. Do not rub too long in one place.



WHITEBOARD

The dry-wipe board should be cleaned regularly, as required, using a cleaning product designed for this kind of boards. The use of solvent-based substances may damage the surface.

Do not leave a dirty board for more than 24 hours. Marker pigments can permanently stain paintwork.

METAL PIECES

Do not use solvent-based detergents.

Do not use preparations containing abrasive agents such as powders, pastes or cleaning milks that may scratch the surface. Do not use rough sponges.



hushoffice



hushoffice.com